

Installation & Operating Instructions

Blower Accessory - Model 2295

Step 1: Disconnect the Wall-Mounted Heater

A wall-mounted heater must be disconnected from the gas supply and removed from the wall before installing the blower accessory. Contact a qualified service person to do this. Follow all applicable building codes.

Step 2: Remove Knockout Panel

Remove the knockout panel from the back of the heater using a Philips head screwdriver. (Figure 1).

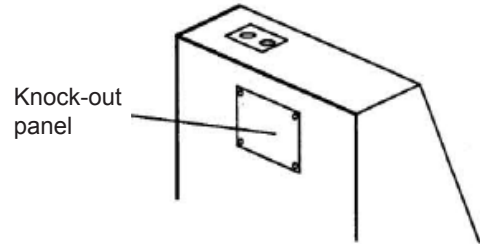


Figure 1

Step 3: Attach the Blower Accessory

Attach the blower accessory to the rear panel of the heater using the four screws provided (see Figure 2).

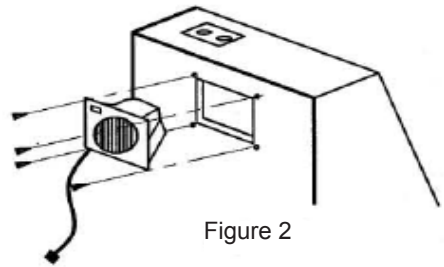


Figure 2

Step 4: Blower Operation

To operate the fan manually, turn the on/off switch to the ON position. Placing the switch in the manual position will keep the blower on constantly.

To operate the blower automatically, turn the AUTO/O/MAN switch to the desired position. Placing the switch in the AUTO position, the blower will be controlled by the sensor on the blower accessory. The sensor will be activated when the temperature of sensor reaches $113\pm^{\circ}\text{F}$ ($40\pm^{\circ}\text{C}$).

To stop operation of the blower, turn the switch to the O position. (Figure 3)

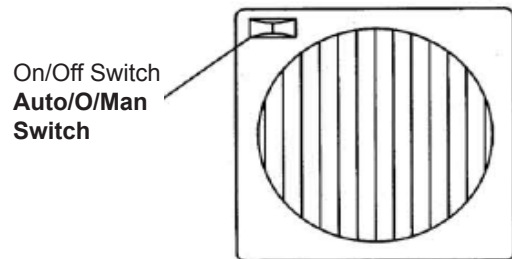


Figure 3

Step 5: This Blower Accessory MUST Be Grounded

This blower is equipped with a three-prong grounding plug for your protection against electrical shock. Use a standard, three-hole, grounded outlet. (Figure 4)

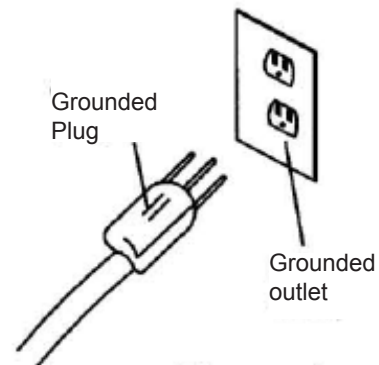


Figure 4