


# Product Bulletin

## FURNACE TROUBLESHOOTING FORSAIRE® DIRECT VENT THERMOCOUPLE REMOVAL

### FOLLOW THESE STEPS:

1. Shut off the gas supply and remove the gas inlet line from valve.

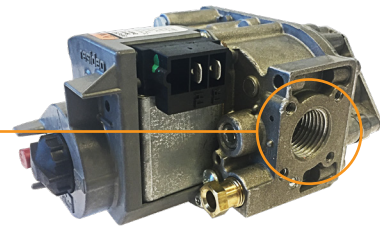

2. Remove the three screws from the front flange burner pan. Release the burner pan from the chamber.

**NOTE:** When releasing the pan, do not bend, as this could cause a leak when re-installing. Burner pan gasket part P101600 may need to be replaced.

3. When the burner pan is removed from the chamber, pull the burner control assembly toward you and remove the three tabs on the back side of the chamber.

4. The burner control assembly is removed. You now have access to the thermocouple.

