


SERVICING YOUR WILLIAMS™ FURNACE

GETTING READY FOR WINTER - LIGHTING THE PILOT

DIRECT VENT HIGH EFFICIENCY FURNACES

NATURAL GAS MODELS		PROPANE GAS MODELS	
0743512	1773512	0743511	1773511
0743512	1773512	073511	1773511

1. This appliance has a pilot which may be lit by hand. When lighting the pilot, follow these instructions exactly.
2. **BEFORE LIGHTING** smell around the appliance area for gas. Be sure to smell next to the floor because some gases are heavier than air and will settle on the floor.
3. Use only your hand to push in or turn the gas control knob. Never use tools. If the knob will not push in or turn by hand, don't try to repair it, call a qualified service technician. Force or attempts to repair may result in a fire or explosion.
4. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
5. **WHAT TO DO IF YOU SMELL GAS**
 - Do not try to light any appliance or strike a match.
 - Do not touch any electrical switch; do not use any phone or cell phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
6. Set the thermostat to the lowest setting.
7. Turn gas control knob clockwise to OFF. Do not force.
8. Wait (5) minutes to clear out any gas. If you then smell gas, STOP! Follow step 5 above in the safety information above. If you don't smell gas, go to the next step
9. Turn gas knob counterclockwise to PILOT.
10. Look inside the flame view which is located on the external casing.
11. Push in control knob all the way and hold in. Immediately press the piezo igniter to end of the stroke, then release it. Continue pressing and releasing the piezo igniter with the control knob pressed down, until the pilot flame appears in the flame view. Once the pilot flame is lit, hold the control knob in for about one (1) minute.
12. Release knob and it will pop back up. Pilot should remain lit. If it goes out, repeat steps 6 through 11.
 - If knob does not pop up when released, stop and turn the gas tap installed on the gas supply line to the CLOSED position. Immediately call your service agency or gas supplier.
 - If the pilot will not stay lit after several tries, turn the gas control knob to OFF and call your service technician or gas supplier.
13. Turn the control knob counterclockwise to the desired setting between HI and LO. The main burner flame will appear.

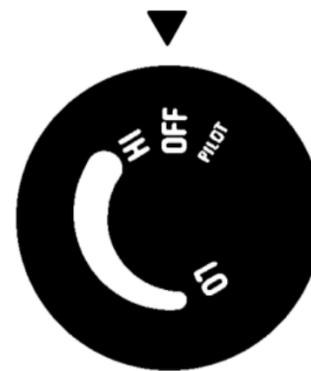

WARNING: If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life. **IMPORTANT:** Keep burner and control compartment clean.